
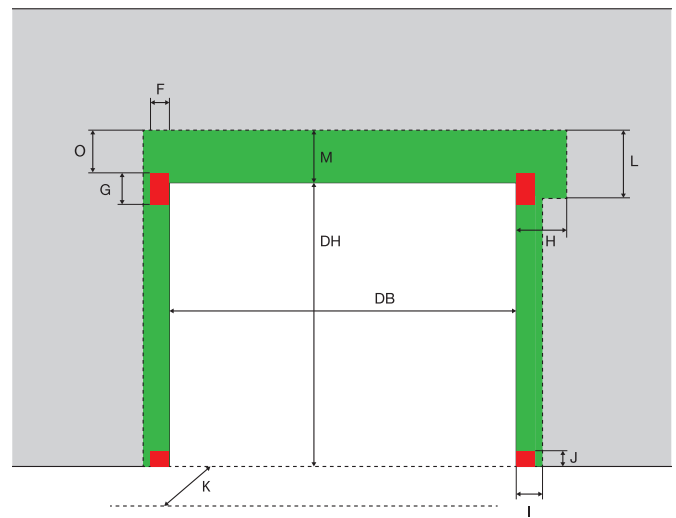


# NORDIC 344-prottec-Rollback

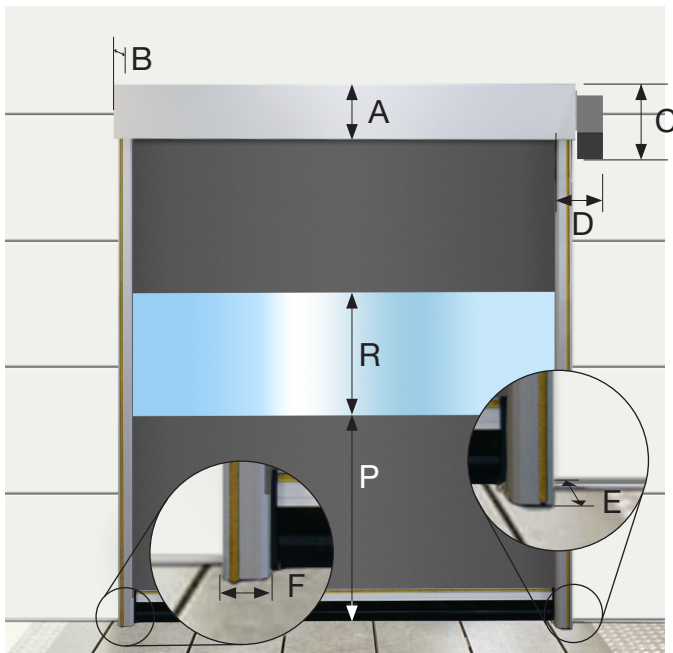

- Fixing area
- Free space required for installation (500mm in front of the door)

## Measurements:

DB	clear width
DH	clear height
P	vision panel bottom level (optional)
R	vision panel height (optional)
A	252
B	320
C	317
D	260
E	120
F	80
G	104
H	350
I	150
J	100
K	500
L	400
M	450
O	255
S	523

